

Installation Instructions

Model 198 - Stinger 24

Loud Industrial Ringer 24 VDC

1. Unscrew terminal cover.
2. Mount the Stinger 24 on the wall using the 3 - #8 screws provided with the unit. Screw holes are located at the top of the unit and beneath the terminal cover.
3. Connect one pair of wires from contacts 1 and 2 of ringer to external relay contacts.
4. Connect one pair of wires from contacts 3 and 4 of ringer to 24VDC power supply.


Note: Negative lead must connect to contact 4.

Positive lead must connect to contact 3 (if reversed, ringer will be imoperative).

5. Plug in power supply.
6. Replace terminal cover.

Test

1. Turn volume to minimum
2. Close external relay contacts.
Ringer will operate during external relay contact closure.
3. Set volume to desired level.

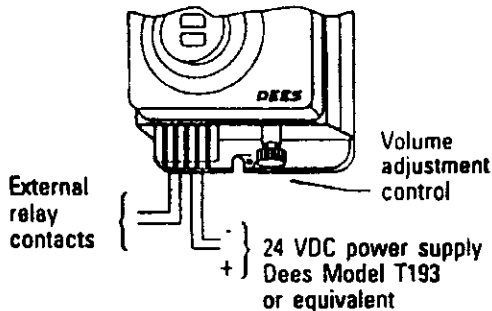

DEES Communications

www.dees.com